




USB

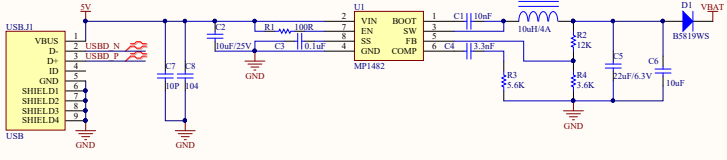

建议设置成4V

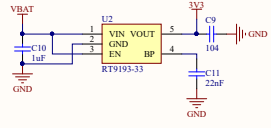

Power

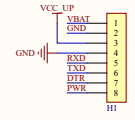


Interface


BCM	wPi	P1	USB 5V	wPi	BCM
2	8	3V3	USB 5V		
3	9	SDA1	GND	15	14
4	7	GPIOT	TXD	16	15
		GND	P_RX	18	18
17	0	GND	RXD	4	23
27	2	GPI00	GND	5	34
22	3	GPI02	GND		
		GPI03	GND		
10	12	3V3	GPI05	6	25
9	13	MOSI	GND	10	8
11	14	MISO	GPI06	11	7
		SCLK	CE0		
		GND	CE1		
5	21	SDA0	SCL0		
6	22	GPI021	GND	26	12
13	33	GPI022	GPI026		
19	24	GPI023	GND	27	16
		GPI024	GPI027		
26	25	GND	GPI028	28	20
		GND	GPI029	29	21

RPI GPIO


Raspberry Interface

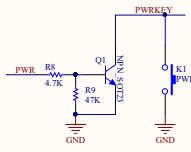


Pwrkey

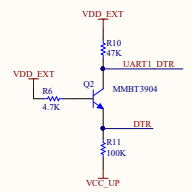

DTR Control

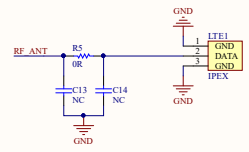


Main ANT

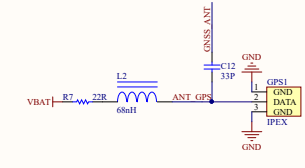


GNSS ANT

Antenna

 
W_{aveShare} SIM7080X Cat-M/NB-IoT HAT




Option Interface

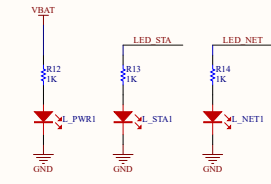

Indicator light

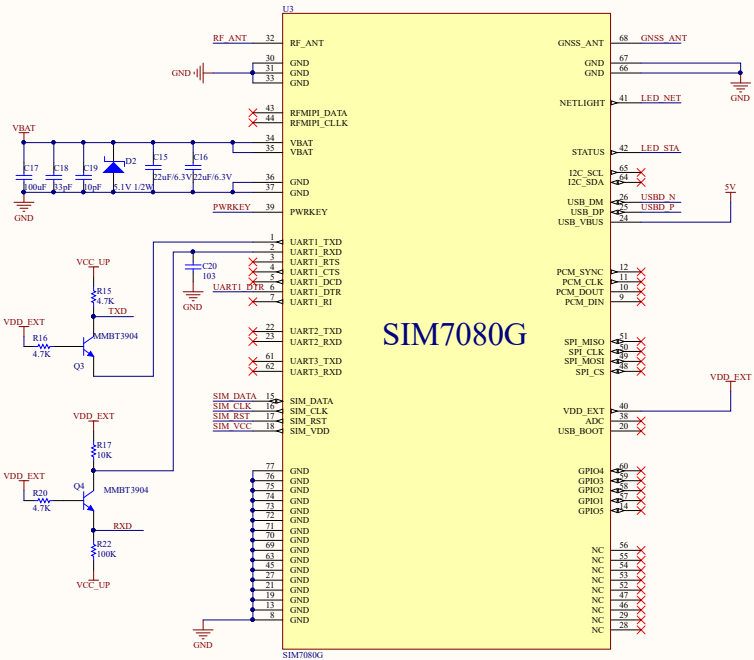

SIM7080G

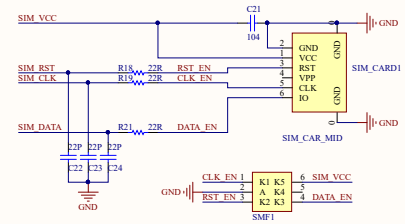

SIM_CARD